

KC10 WAX & GREASE REMOVER

GENERAL INFORMATION

KC10 WAX & GREASE REMOVER removes grease, wax, silicone, adhesives, tar, tree sap, insects and dirt. KC10 is a quick flashing product designed to speed initial surface prep before sanding and body work. Don't apply more than you can wipe clean before KC10 dries, or no contaminants are removed. (Wiping cloths become contaminated, change regularly and dispose of properly).



1. USING KC10

KC10 is to be used over unsanded surfaces and OEM finishes. DO NOT USE KC10 over polyester fillers, primers, sealers, or during any step of paint application. It is surface prep cleaner only.

2. APPLICATION

1. Wash surface with mild detergent and water.
2. Rinse and dry surface.
3. Soak clean cloth with KC10.
4. Wipe surface with KC10 and wipe dry with clean, dry cloth before product dries.



KC10 should not be allowed to dry on surface. If this occurs, re-apply KC10 using a clean cloth and wipe dry.

NOTES